R & V WORKS

COOKER ASSEMBLY INSTRUCTIONS

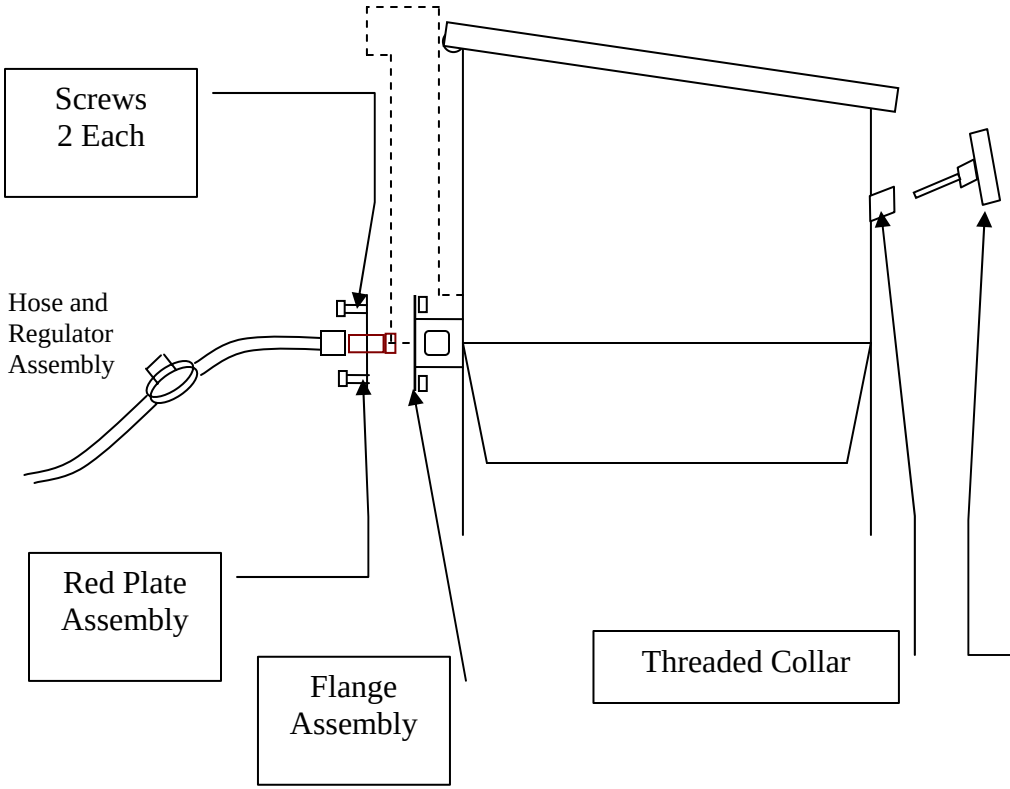

INSTRUCTIONS FOR ATTACHING HOSE AND REGULATOR ASSEMBLY TO THE FRYER

1. Attached red plate assembly to the tube flange with two screw and nuts provided.
2. Attached Hose and Regulator to the red plate assembly using crescent wrench, tighten snuggly
3. Attached Thermometer to the front of the Cajun Fryer by inserting the treads into the treaded collar as shown, using a crescent wrench to tighten until snug.